




# HP iPAQ h4155 LCD screen replacement

This guide will show you how to remove and replace the touch lcd screen.

Written By: John Pagliero

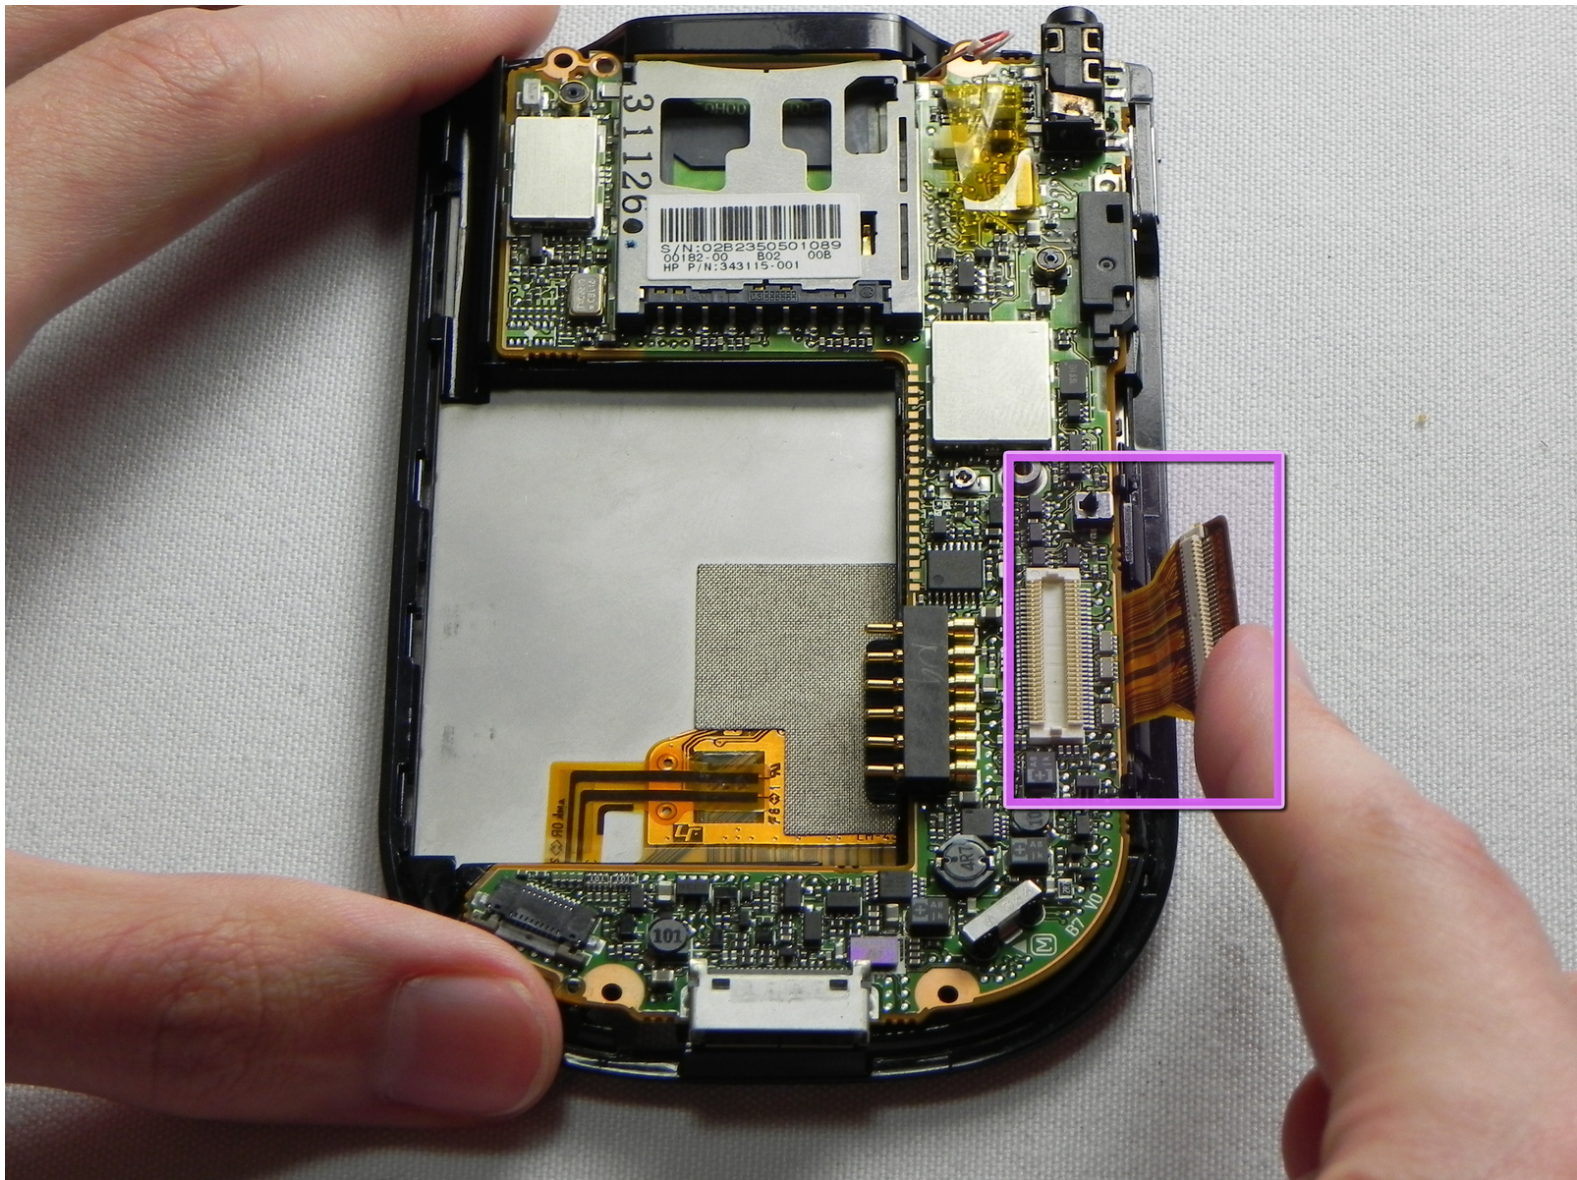



## TOOLS:

- [iFixit Opening Tools](#) (1)
  - [T5 Torx Screwdriver](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-



## Step 1 — Battery removal



- Slide the silver release tab up and simultaneously lift the cover up from the left side.

## Step 2



- Push the tab from left to right to remove the cover.

## Step 3



- Now lift the battery up and away from the device to remove it.

## Step 4 — Back Case



- Remove the four silver screws (T5 x .25 in).




## Step 5



- Remove the single black screw (T5 x .125 in) beneath the HP sticker.

## Step 6

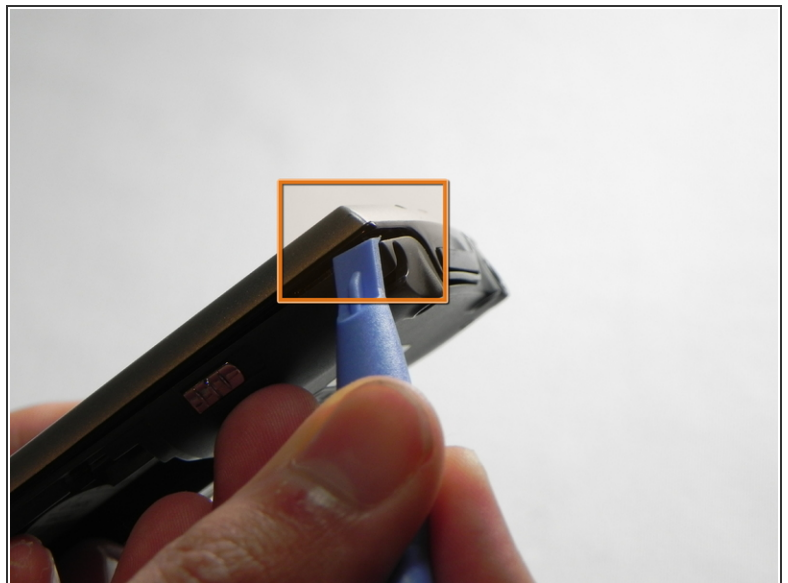


- Next, use your plastic removal tool to separate the gray back from the black center piece.
- For better results, start the separation at the corner piece.

## Step 7



- Remove the back case.


## Step 8 — Face Plate

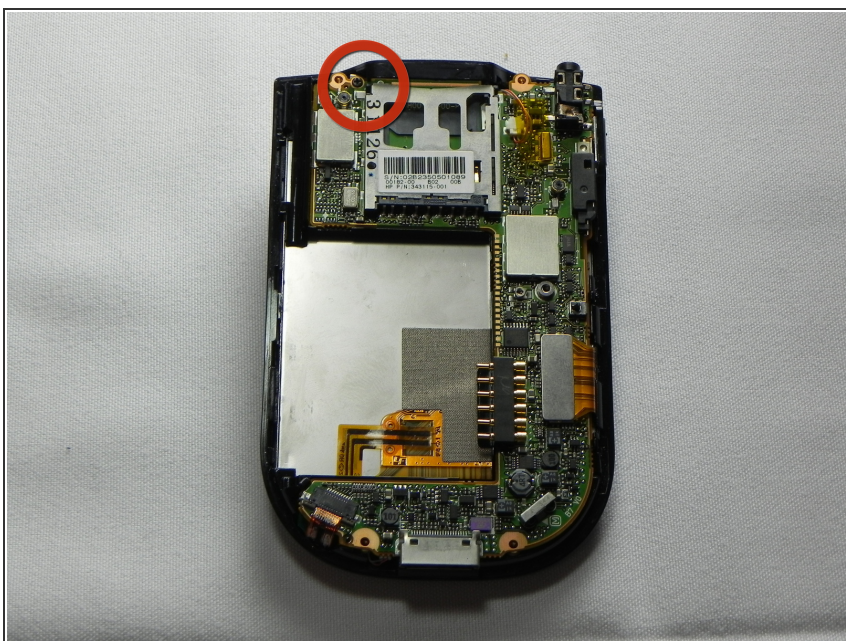

- Now that the back cover is removed, remove the small screw (#00 Philips x .17) to the left of the SD card slot




## Step 9

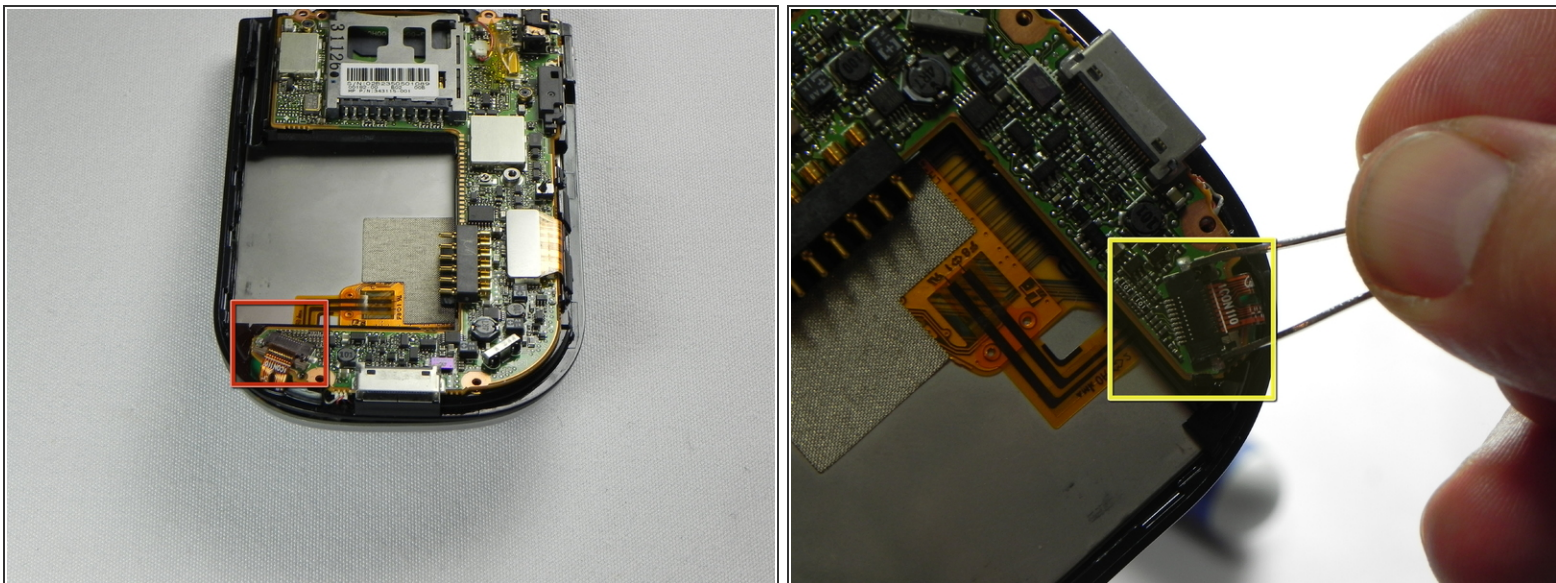


- Next you will need to unlock and remove the ribbon cable
  - Carefully pull back on both sides of the brown bar using metal tweezers, unlocking the cable and slipping it out of the connector
- ⚠ The bar, connector, and cable are fragile components that can be easily broken

## Step 10

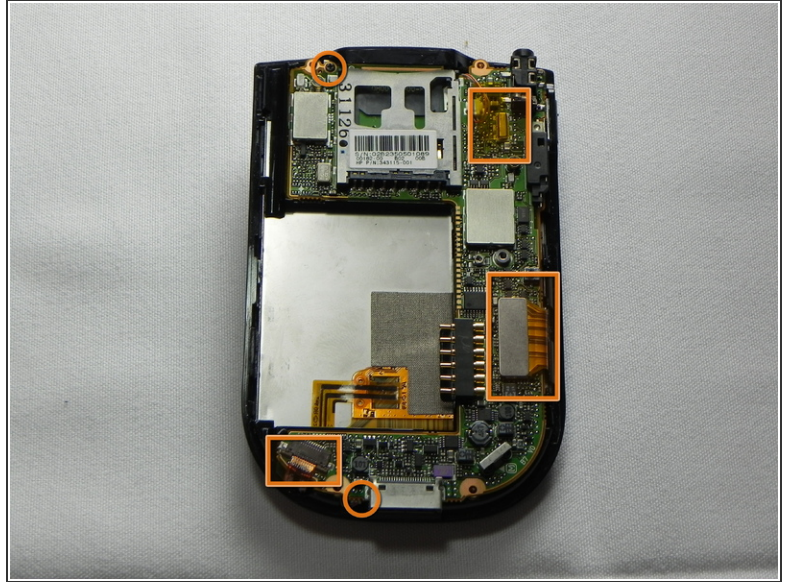

- Next you need to remove the wire off the bottom of the motherboard
- ⓘ The easiest method is to use some metal tweezers and grip the plug close to the connector.
- Make sure all these connections are properly disconnected before separation of the motherboard



## Step 11

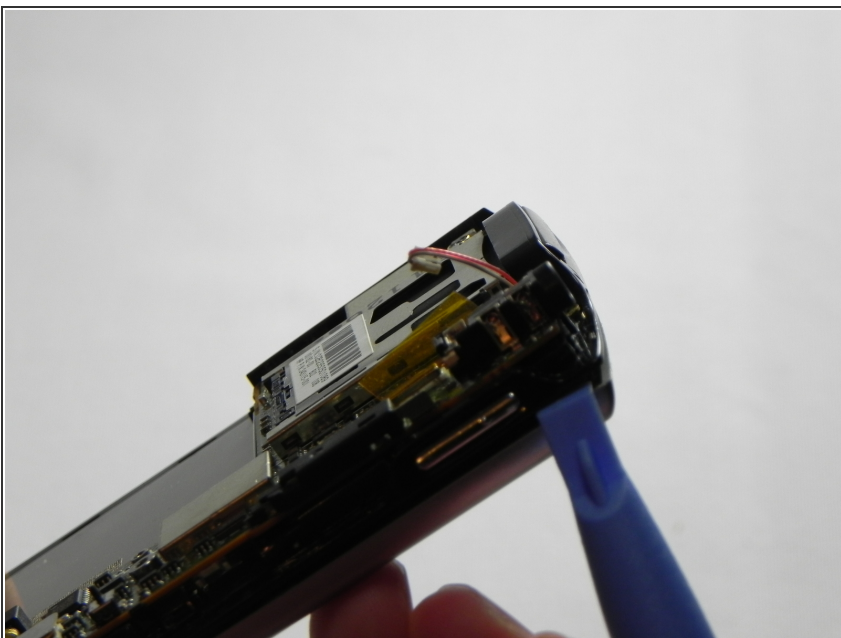

- Next use your plastic removal tool and separate the silver front case from the black frame.





## Step 12 — Touch LCD Screen

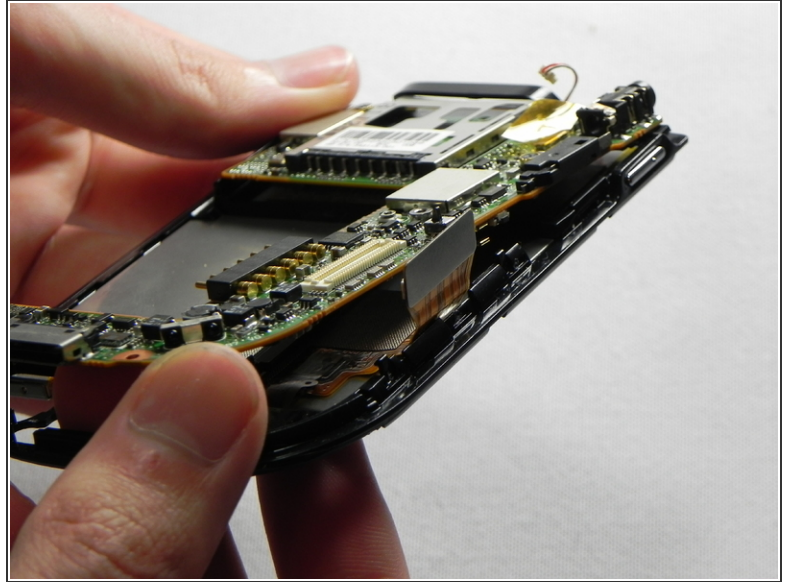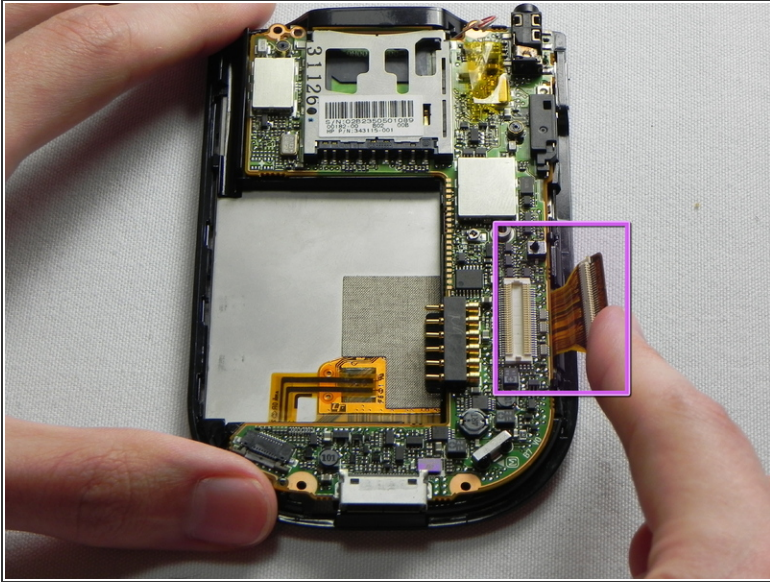

- Now that the front cover is removed we can detach the screen
- Remove the ribbon connector by pulling gently on the silver top. It will snap off the mother board.
- ⓘ The ribbon cable and connector can be easily removed if you gently lift up the motherboard to create a small gap

## Step 13

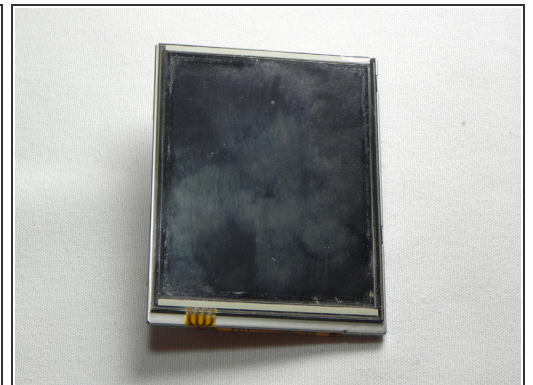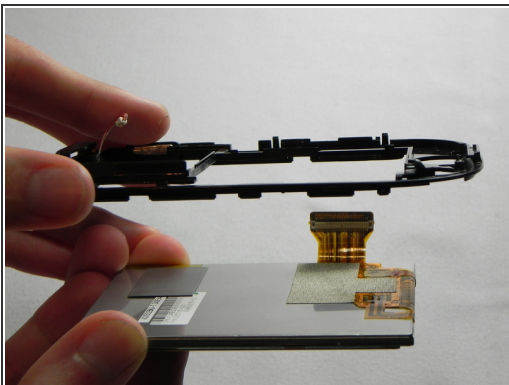

- Now the screen can be removed

To reassemble your device, follow these instructions in reverse order.

